





ERGATTA

ASSEMBLY MANUAL

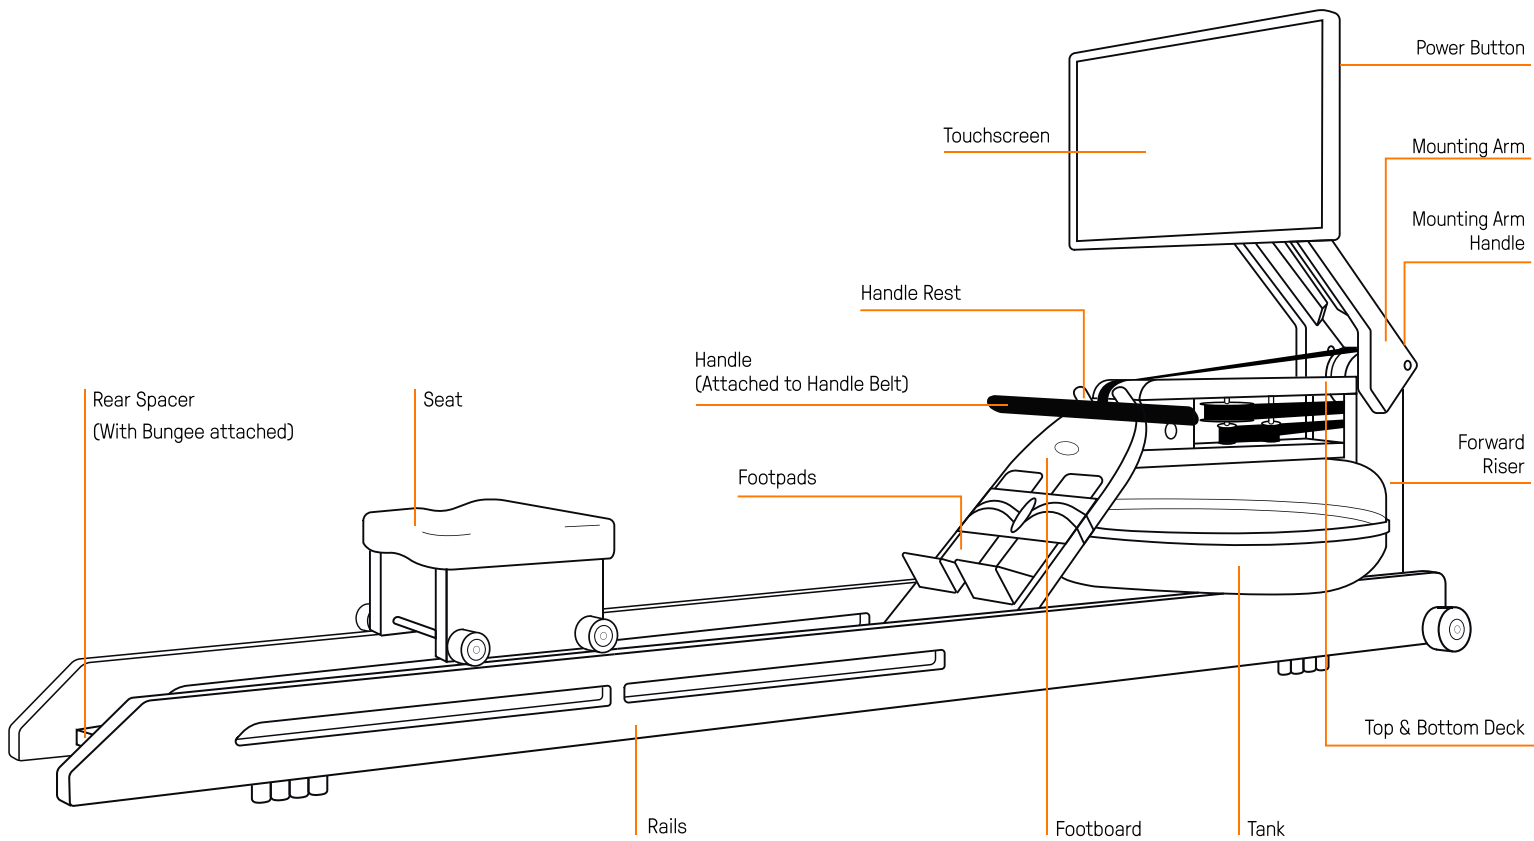


MAIN PARTS

- A** Rail x 2
- B** Touchscreen
- C** Rear Spacer with Bungee
- D** Seat
- E** Footboard and Foot Straps
- F** Tank Assembly, Top/Bottom Deck, Forward Riser, & Mounting Arm
- G** Handle (attached to Handle Belt)

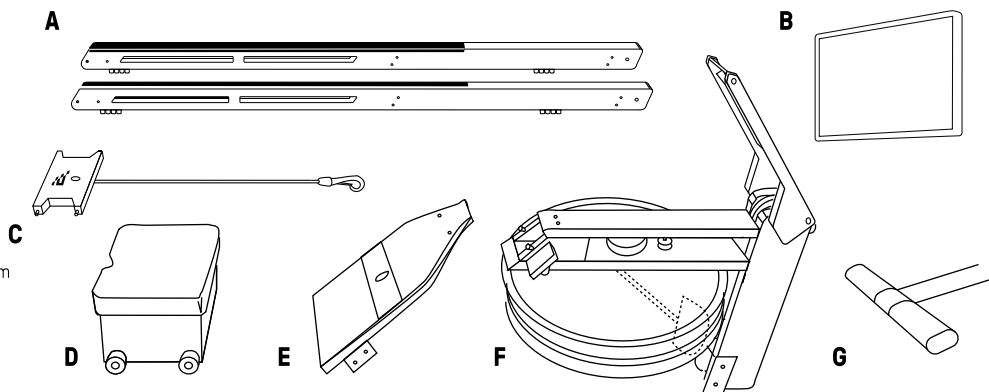


OTHER PARTS

- H** Dolly Wheel Assembly x 2
- I** JCB Bolt x 8
- J** JCN Nut x 12 (4 are pre-installed on Rear Spacer)
- K** Handle Rest x 2
- L** Handle Rest Bolt x 2
- M** 5mm Allen Key x 2, 1/8" Allen Key x 1
- N** Footpads x 2
- O** Syphon Pump x 1
- P** Touchscreen Bolt x 1
- Q** Power Cord x 1
- R** USB Cable x 1
- S** Sensor Cable x 1 (Pre-installed in Tank Assembly)
- T** Tank Stopper x 1
- U** Footpad Assembly Card x 1

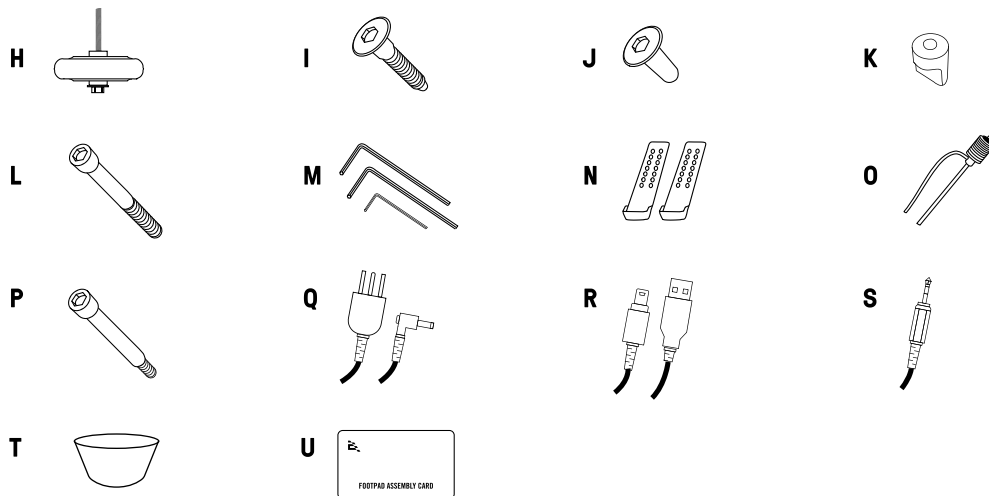

1

Lay the rails on the floor parallel to one another. Make sure that the black extrusions are facing the inside of the rails.

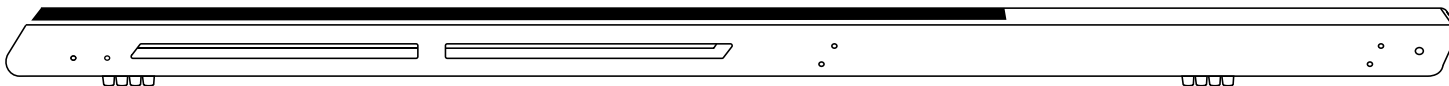



2

Unscrew the four JCN Nuts from the rear spacer, then align the rear spacer with the holes on the rails such that the Ergatta logo is facing upwards and the bungee cord is facing towards the front of the rails. Fasten the rear spacer to the rails using the four JCN Nuts without fully tightening at this time.

**JCN Nut
(x4)**




Allen Keys

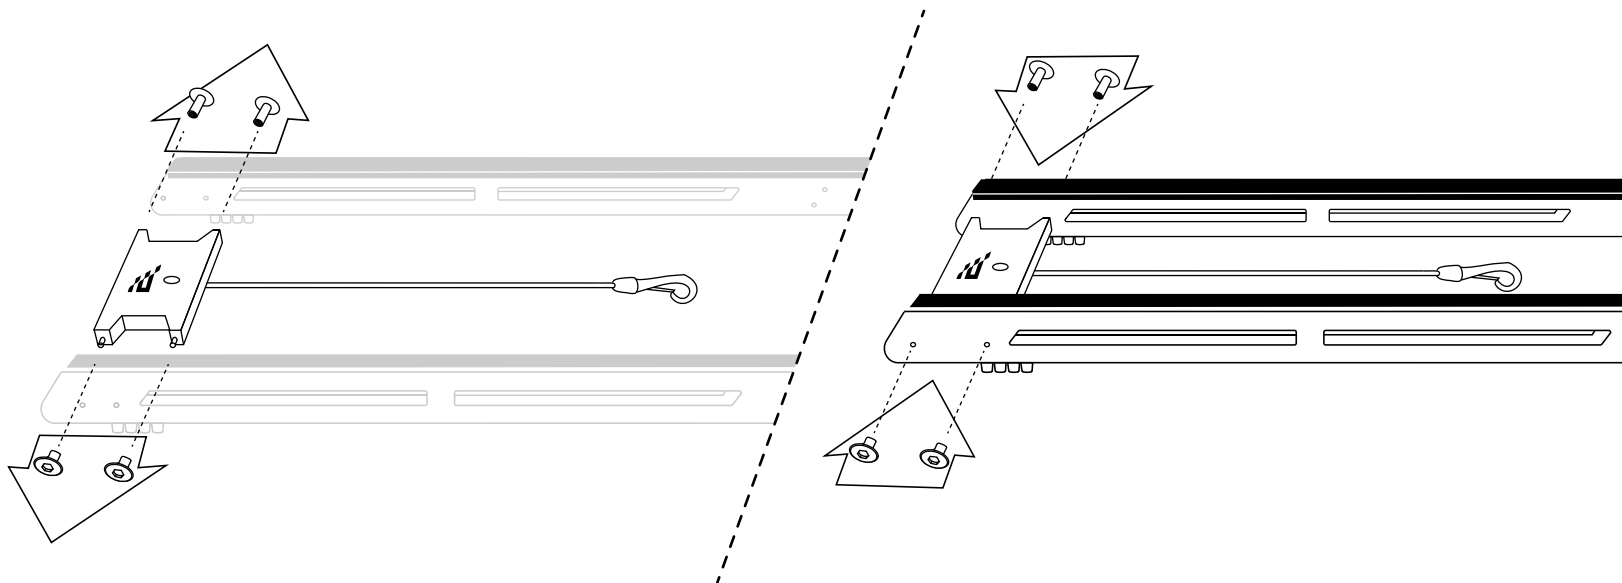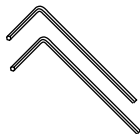

3

Place the seat between the rails. The indent on the seat should face the rear spacer. All four load wheels should sit on the black extrusion, with the guide wheels locked under the black extrusion such that the seat cannot be lifted off the rails. Note: It may be necessary to separate the rails slightly to fit.

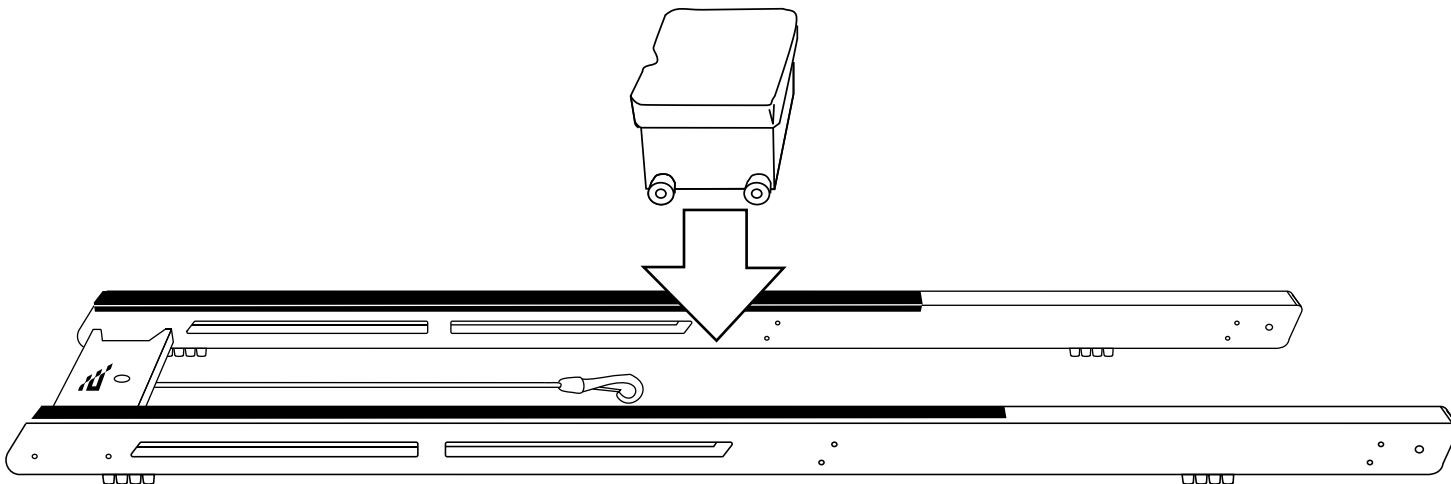


4

Unscrew the JCN nuts from the wheel assembly and attach the wheels to the outside of the rails. Attach the JCN first using your hands, then tighten with the 5mm Allen key.





**JCN Nut
(x2)**



**Wheel Assembly
(x2)**

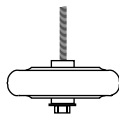


Allen Keys

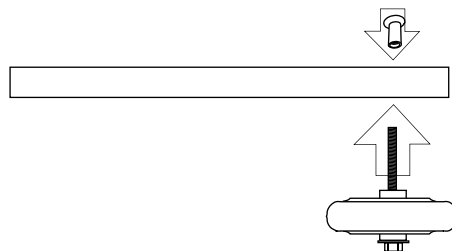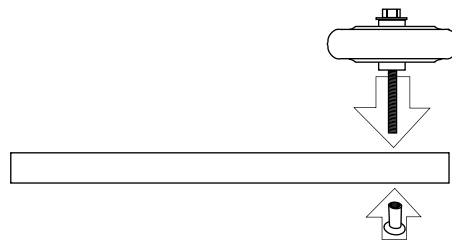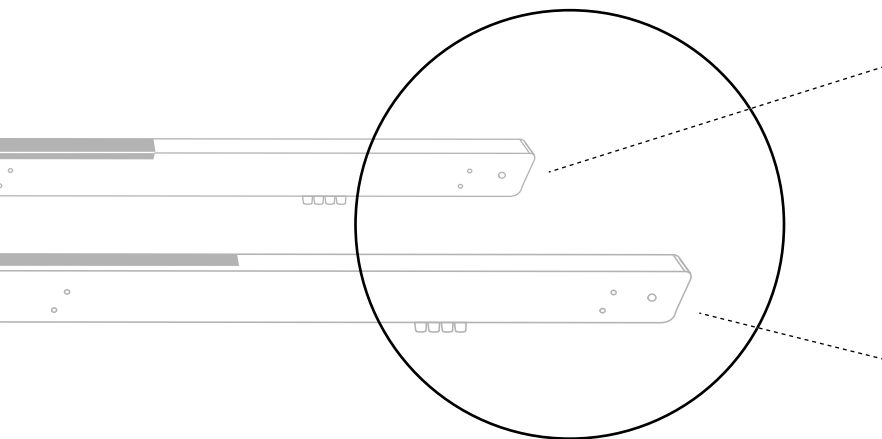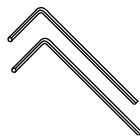

5

Raise the mounting arm by gently pulling the spring lock on the back of the forward riser, and lifting the arm until it locks in place.

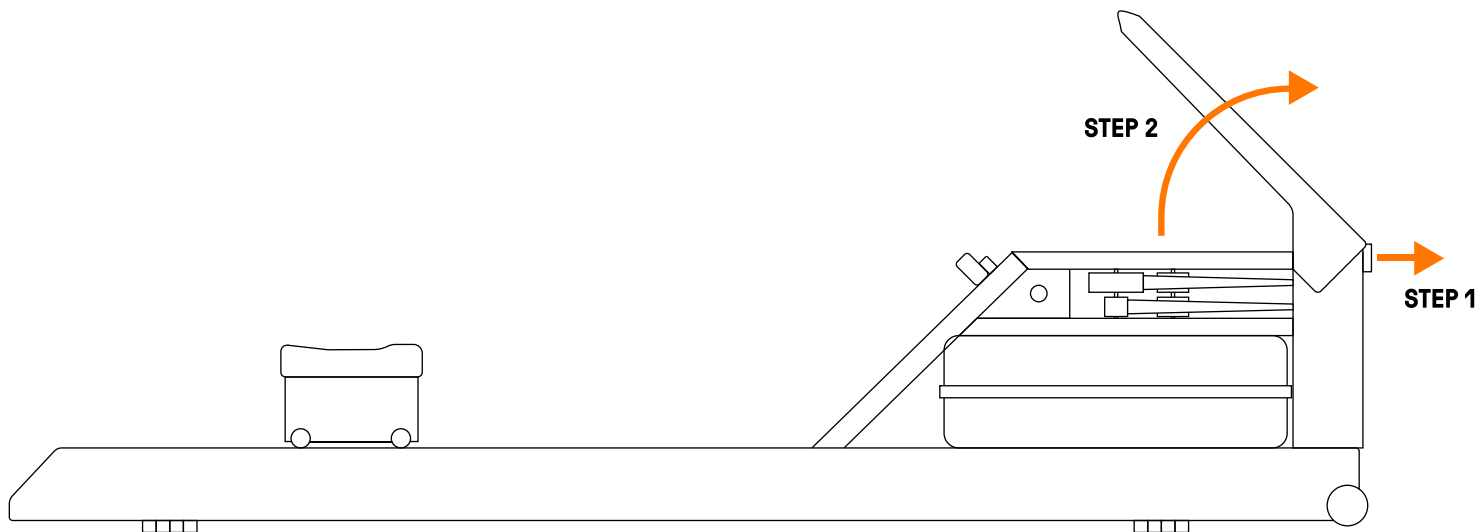


6

Place the tank assembly onto the rails, then using the JCN nuts and bolts, attach the tank to the rails. At this stage, they should be left hand tight. Note: one Allen Key is located beneath the rear spacer.



**JCN Nut
(x4)**



**JCB Bolt
(x4)**

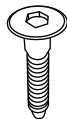

Allen Keys

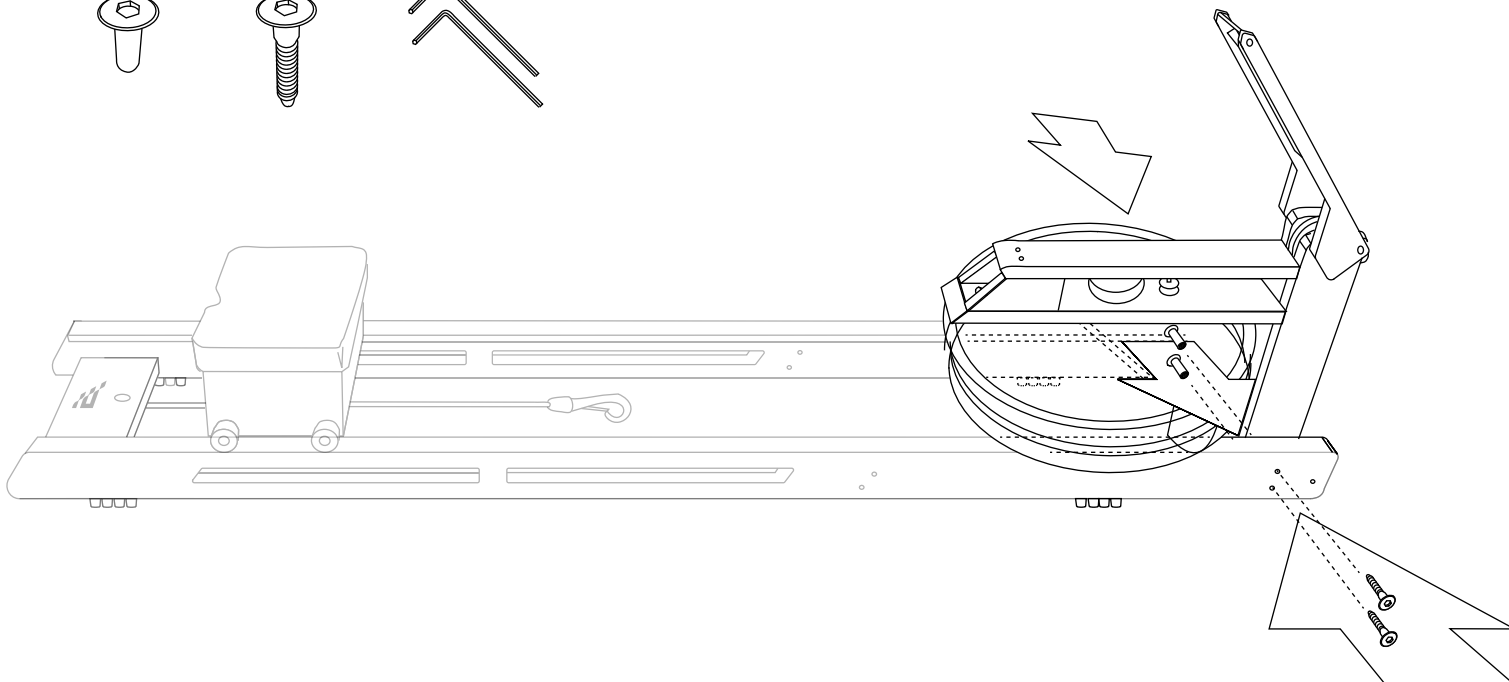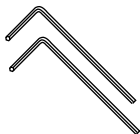


7

Loosen the 2 bolts on the top deck using the 5mm Allen key. Assemble the footboard between the rails to lean against the top deck. Attach the footboard to the rails using JCN nuts and JCB bolts, leaving them hand tight.



**JCN Nut
(x4)**



**JCB Bolt
(x4)**

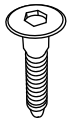



Allen Keys

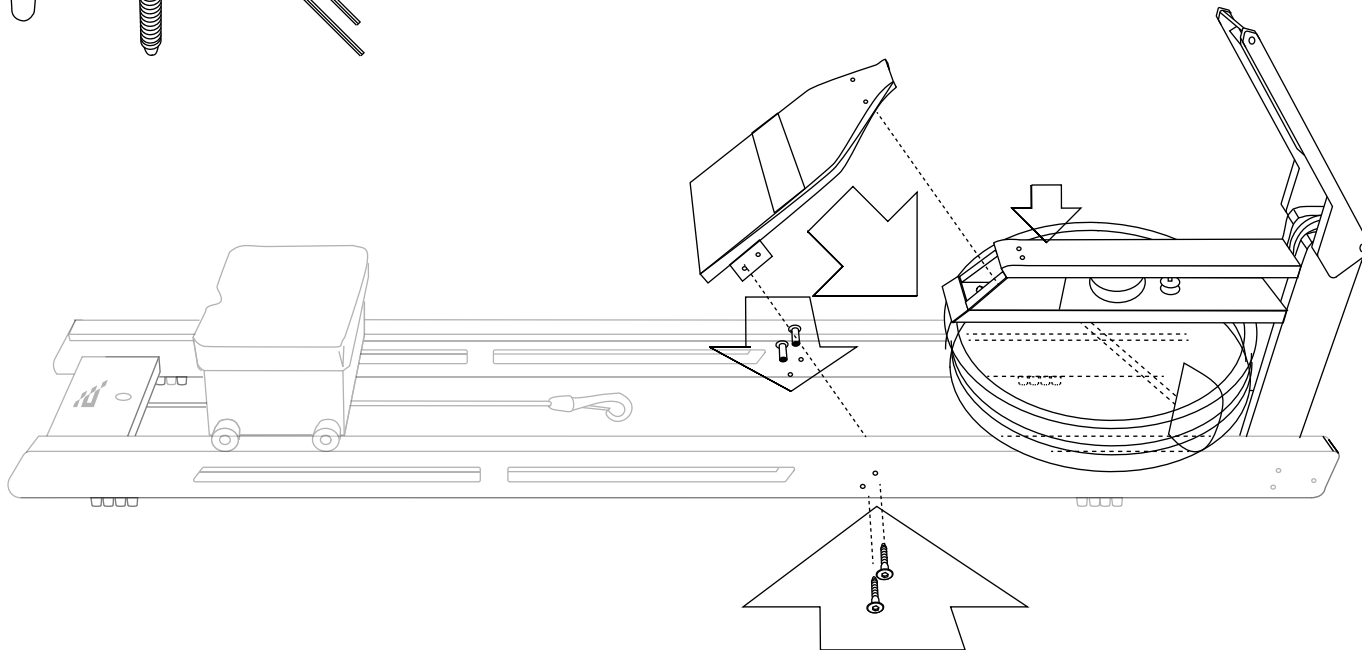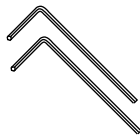

8

Place the provided Footboard Assembly Card on the opposite side of the straps, pushing it all the way through the slot for the Footpads. Using the Assembly Card as a ramp, install the Footpads onto the Footboard.

**Footpads
(x2)**

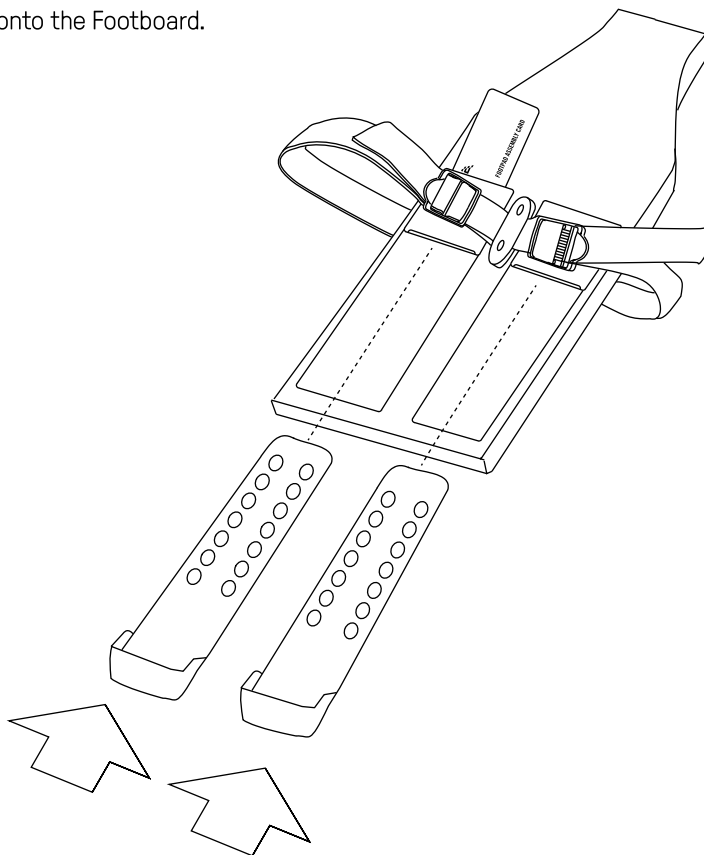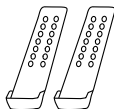

9

Screw the handle rests into position with the handle notch facing downwards using the handle rest bolts. Do not overtighten.



**Handle Rest Bolt
(x2)**



**Handle Rests
(x2)**





Allen Keys

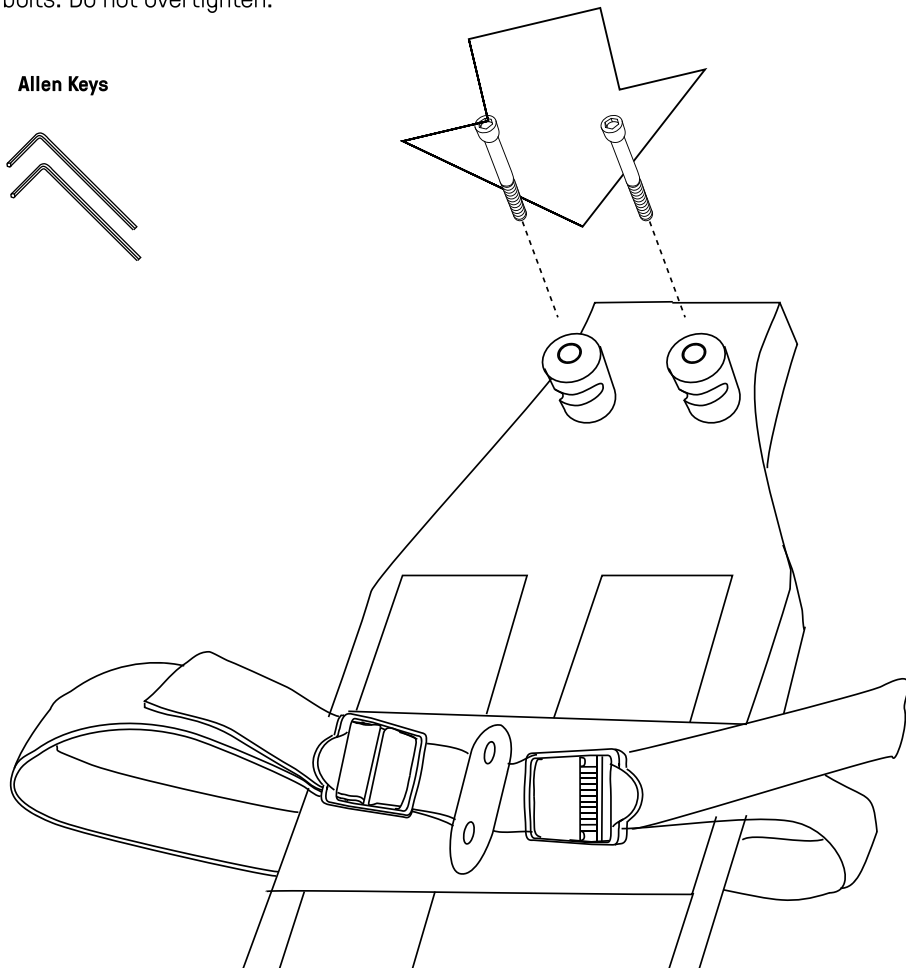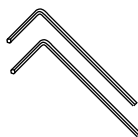

10





Using both 5mm Allen Keys, one to hold the nut and the other to screw the bolt, fully tighten the bolts left hand tight from Steps 4, 7 and 8 including the two JCB's on the top deck. Place one Allen Key back under the rear spacer, for easy access later. Do NOT use power tools to tighten the bolts, as this may lead to them becoming stripped.

Allen Keys

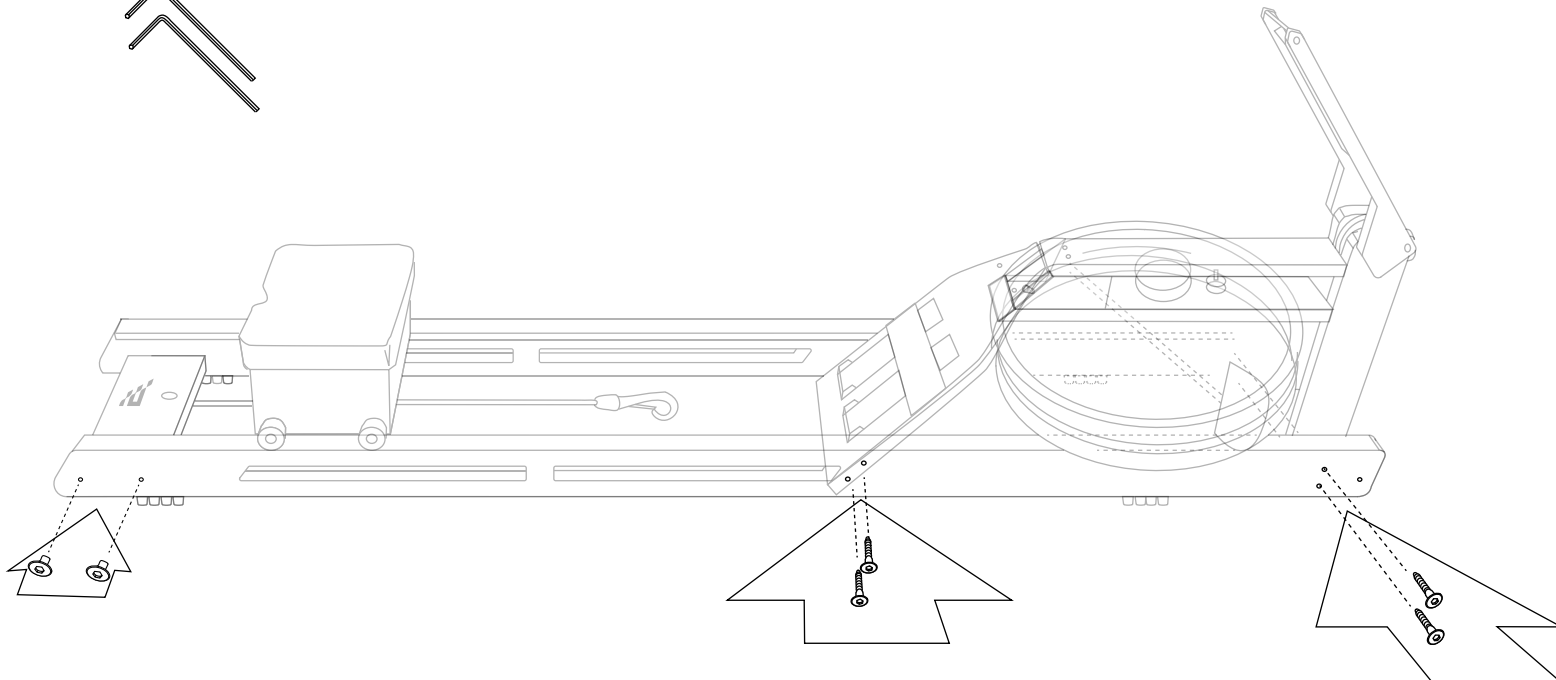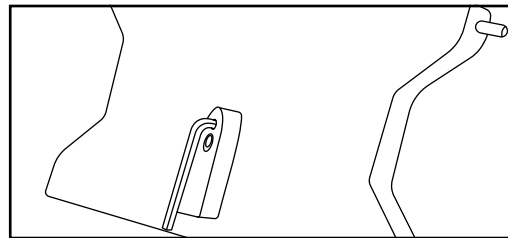

11

Lower the tablet arm and stand the machine upright. Release the recoil belt and connect the bungee to the recoil strap. Note: the recoil belt should go **under** the pulley (center diagram)

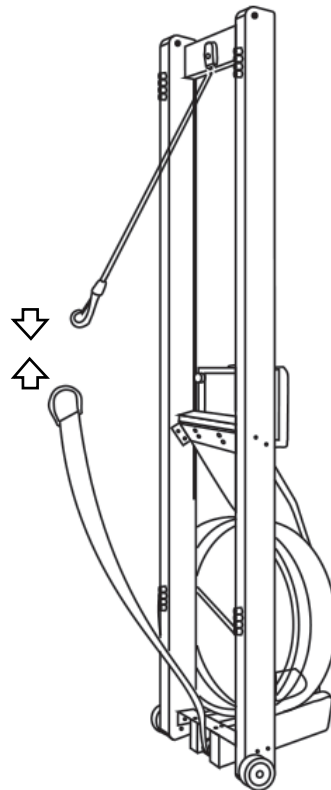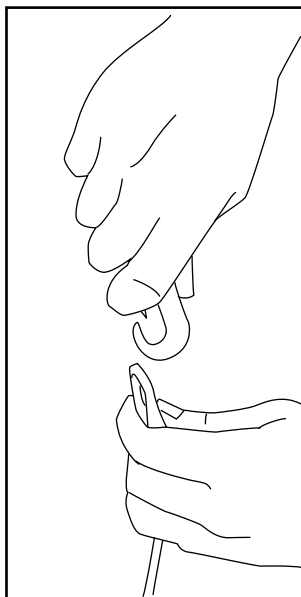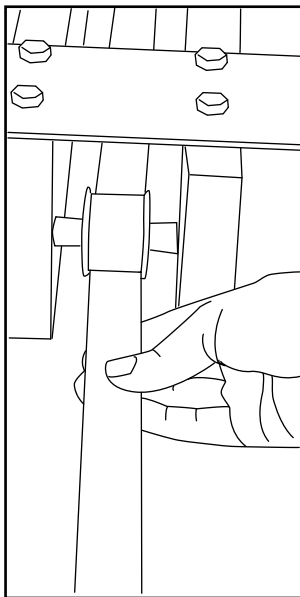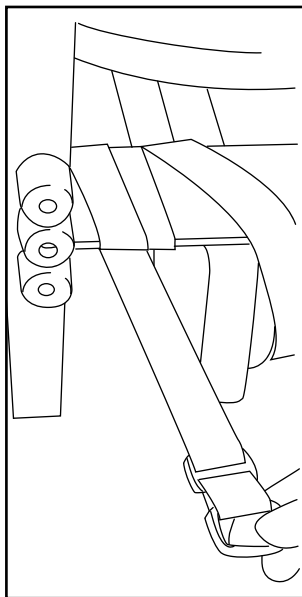



12

Fill a separate container with water (distilled or tap, not well water), to approximately 4.5 gallons (17 L). Insert the straight end of the syphon into your container, and the flexible end into the rower tank. Pump the syphon to fill the water tank with water to the level 17 marker on the side of the tank. Add a purification tablet (provided in your Ergatta bag), then add the stopper to the tank.

Tank Stopper




Syphon Pump

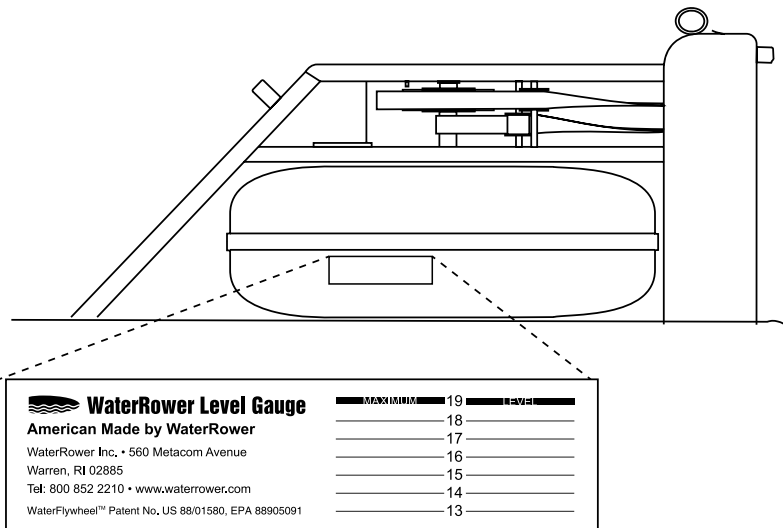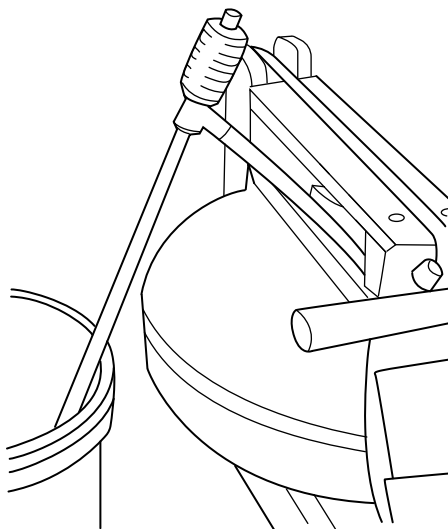

13

Before placing the touchscreen onto the rower, connect to USB cable to the touchscreen and mount as shown below.



Back of Touchscreen

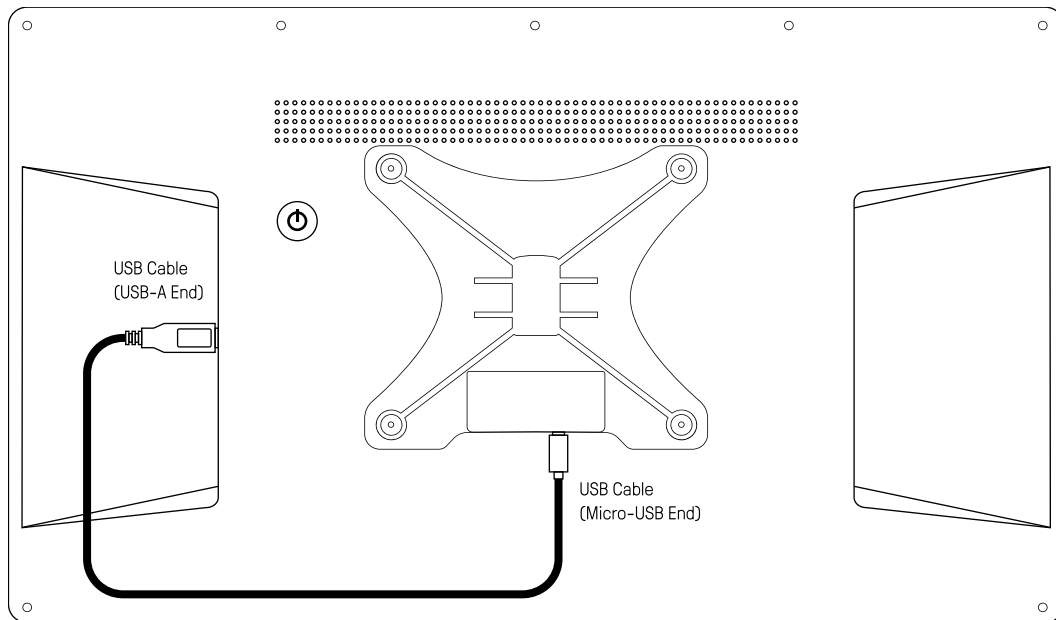

14


Slide the touchscreen onto the end of the mounting arm until it locks into place (the speakers should be on the top). Using the touchscreen bolt and 1/8" Allen key, secure the touchscreen to the arm.

Touchscreen Bolt **Allen Key**

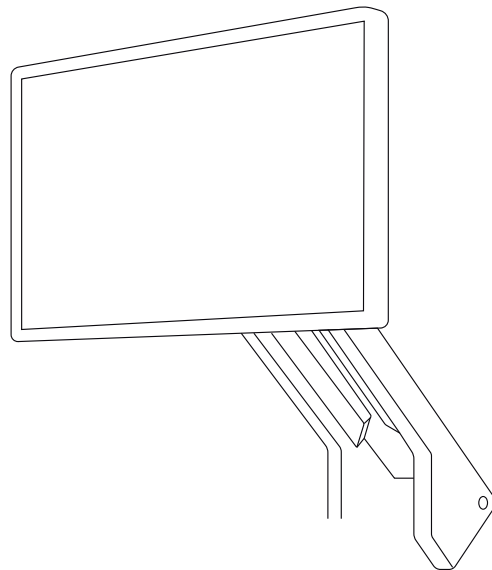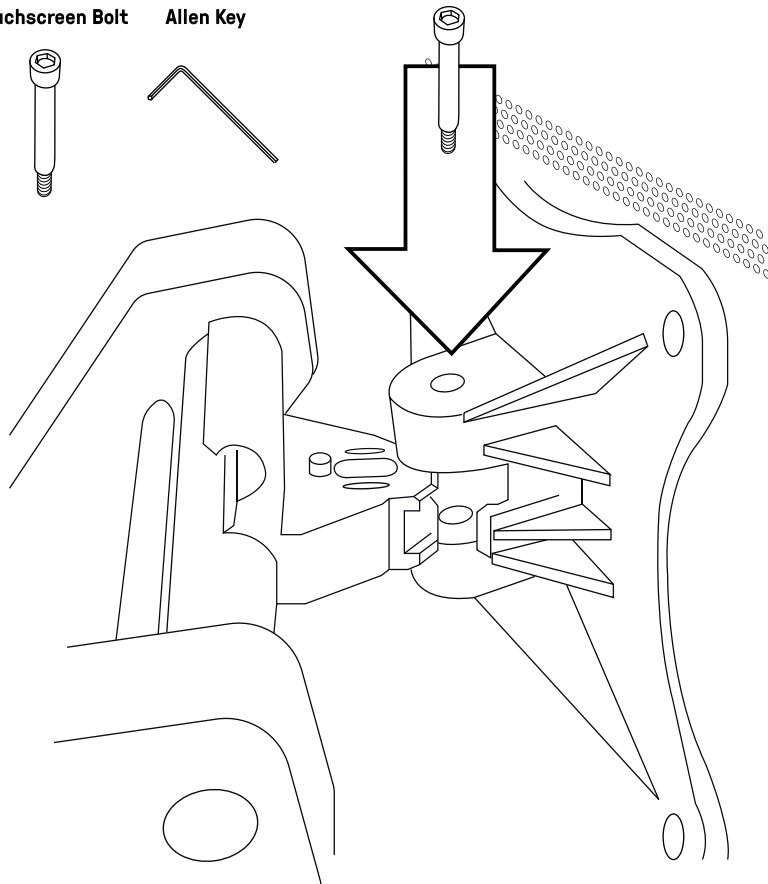

15

Assemble the remainder of the wires as shown below.

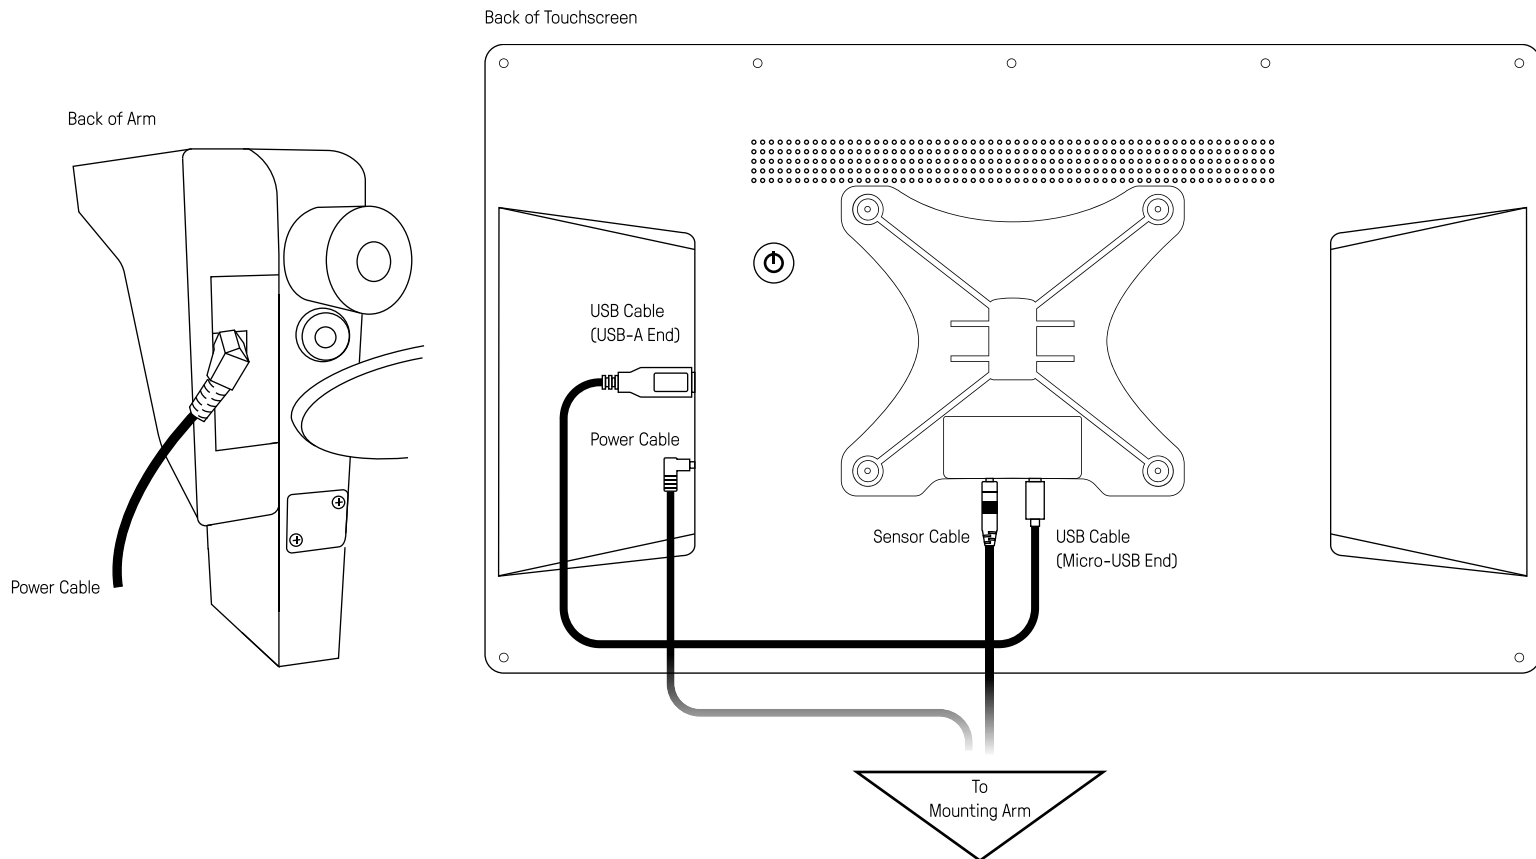

ADDITIONAL RESOURCES



Assembly Video



Assembly Manual PDF



Contact Info

If you require additional assistance with assembly or with any other troubleshooting, please contact us.
For orders outside the US, please use the above QR code for relevant contact info.

Phone: **718-866-4935**

Email: **support@ergatta.com**

Web: **support.ergatta.com**

